



# **INSTALLATION MANUAL REMOVABLE BASEPLATES**

# REMOVABLE BASEPLATE 112 & 250

## INSTALLATION SHEET







References:

|             | Iron               | SS                |
|-------------|--------------------|-------------------|
| Slider 112  | RB0112-0275-0285BL | RB0112-0265-0265S |
| Slider Ø250 | RB0250-0370-0385BL | RB0250-0320-0360S |


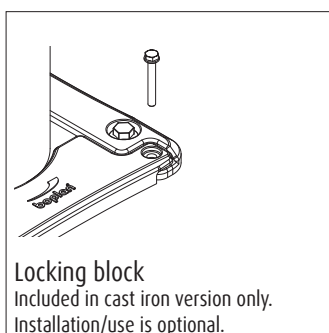
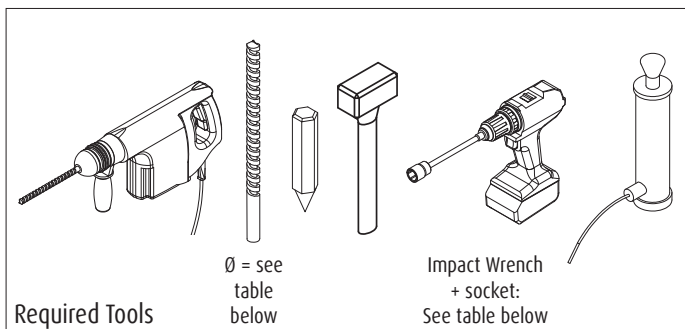


|             | Iron |    | SS |     |
|-------------|------|----|----|-----|
|             | Ø    | SW | Ø  | hex |
| Slider 112  | 10   | 15 | 12 | 5   |
| Slider Ø250 | 10   | 15 | 12 | 5   |




Drill and Socket info  
\* Impact wrench >500 Nm required

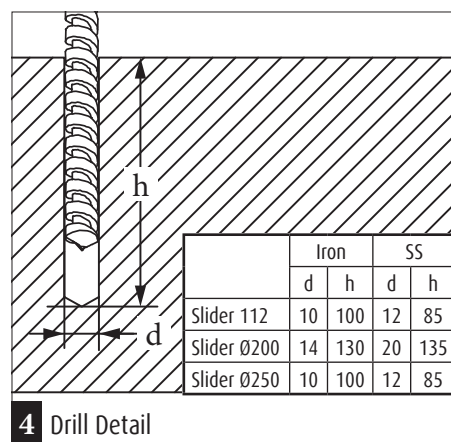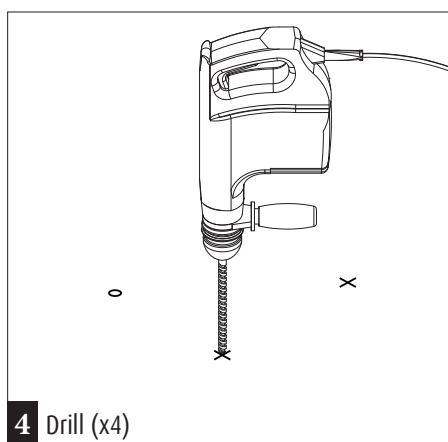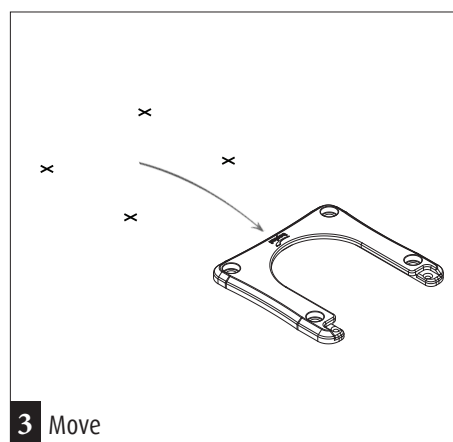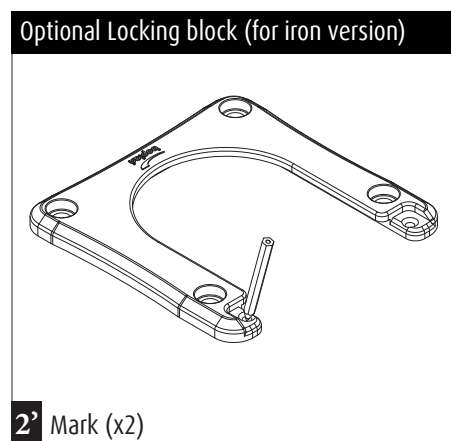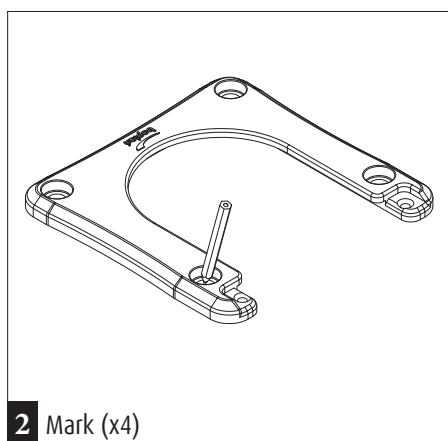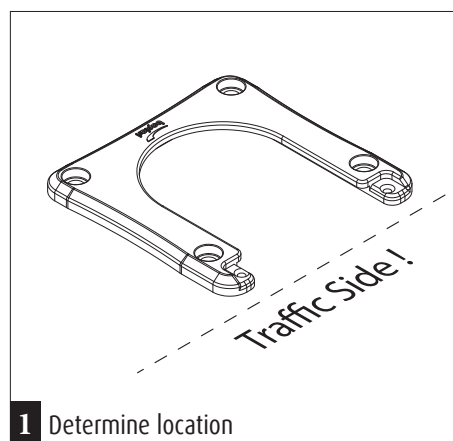




### Optional Locking block

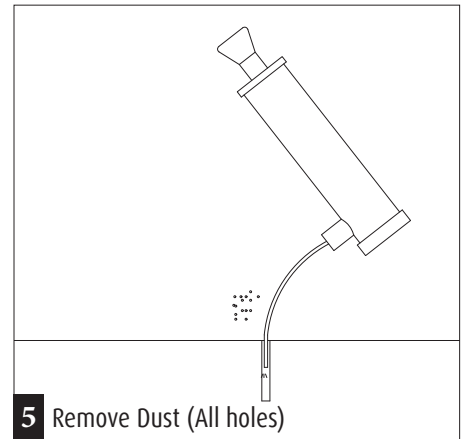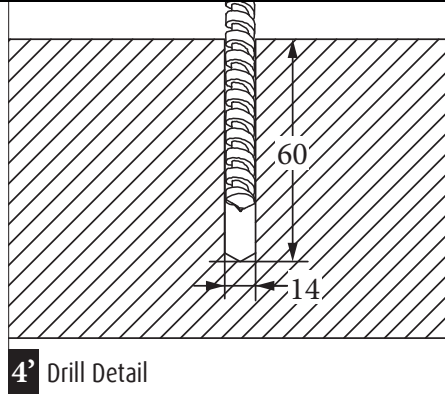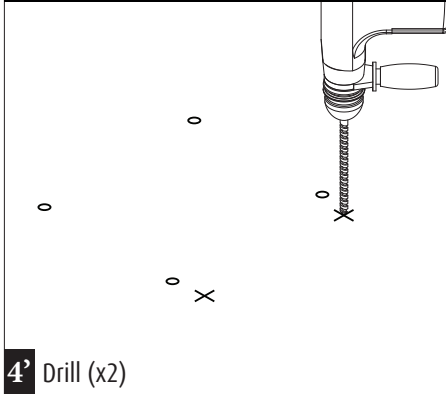


### Optional Locking block

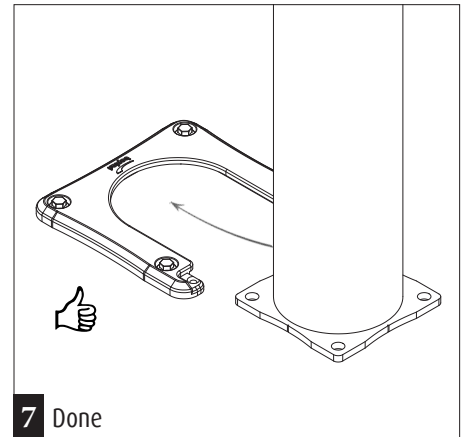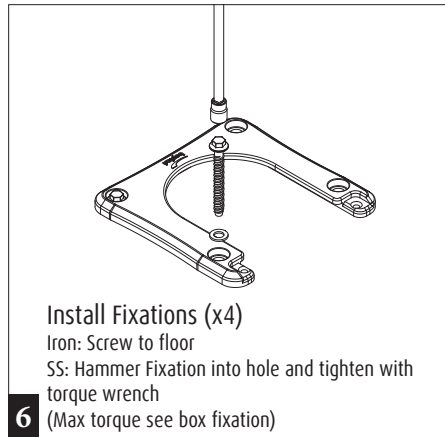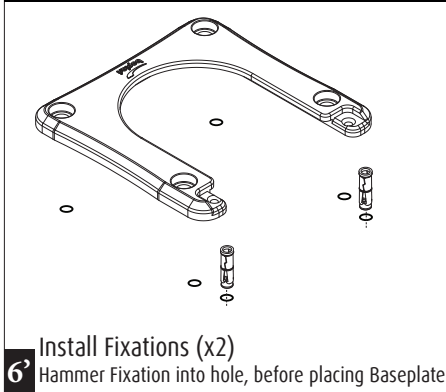


### Optional Locking block

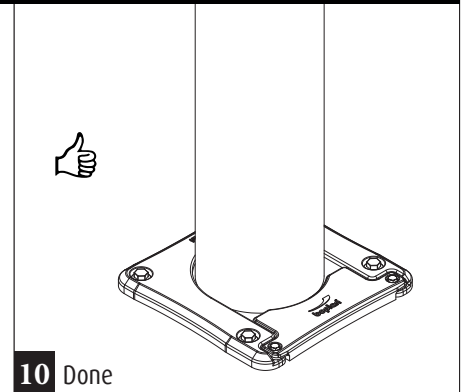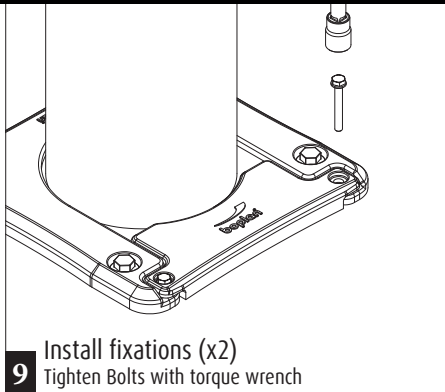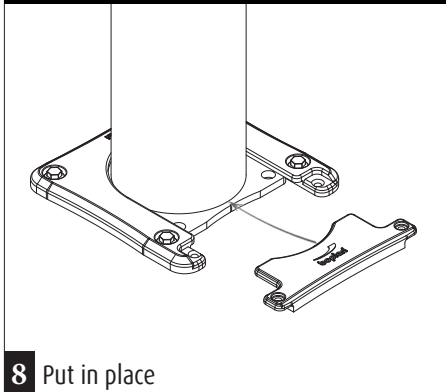


### Optional: removing the Locking block

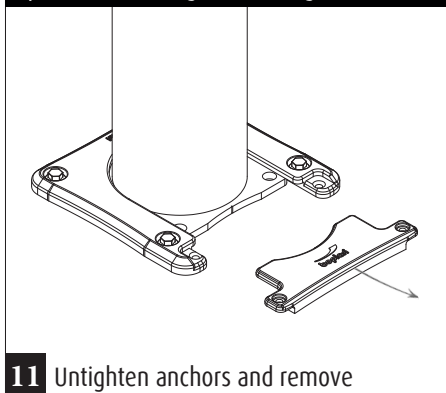


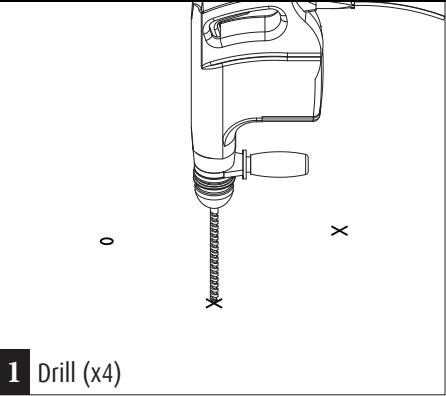


1 Drill (x4)

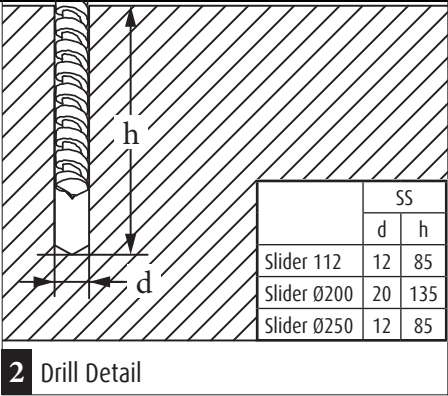


2 Drill Detail

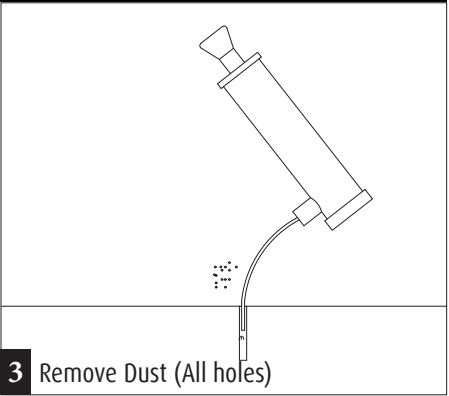


3 Remove Dust (All holes)

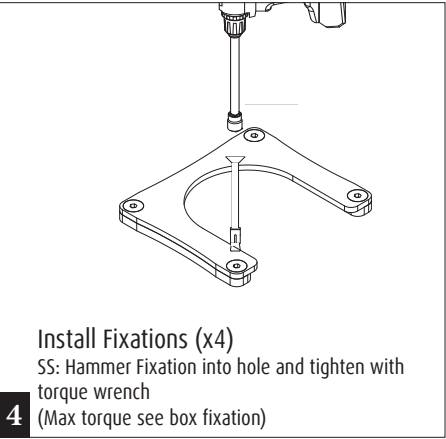

4

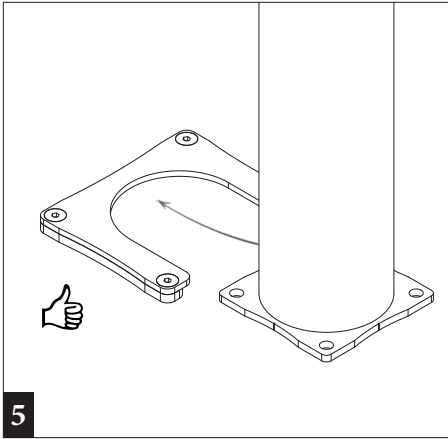

5

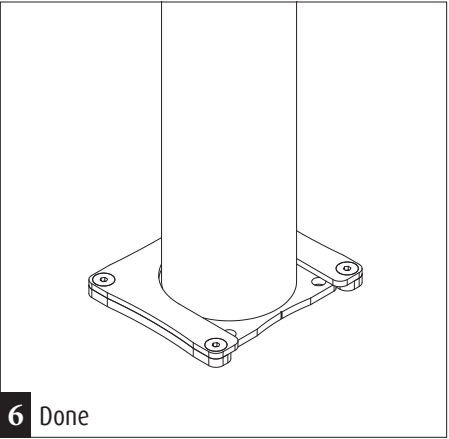

6 Done

# REMOVABLE BASEPLATE BO200R

Reference: RB0200-0305-000...

## INSTALLATION SHEET

