CP CORNER PROTECTOR NM

CP0100-1000-S101YE
CP0100-1000-S101BL

INSTALLATION SHEET

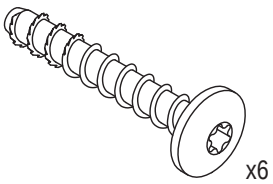

Included:
Concrete bolt 7,5x45 ZN

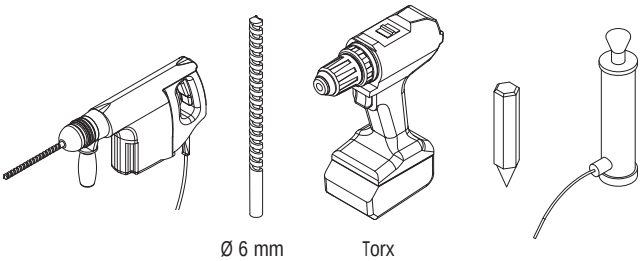

Required Tools

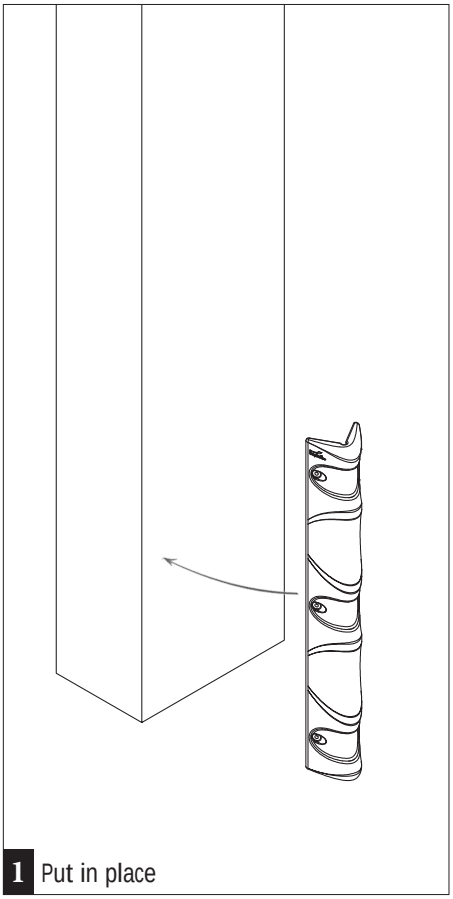

1 Put in place

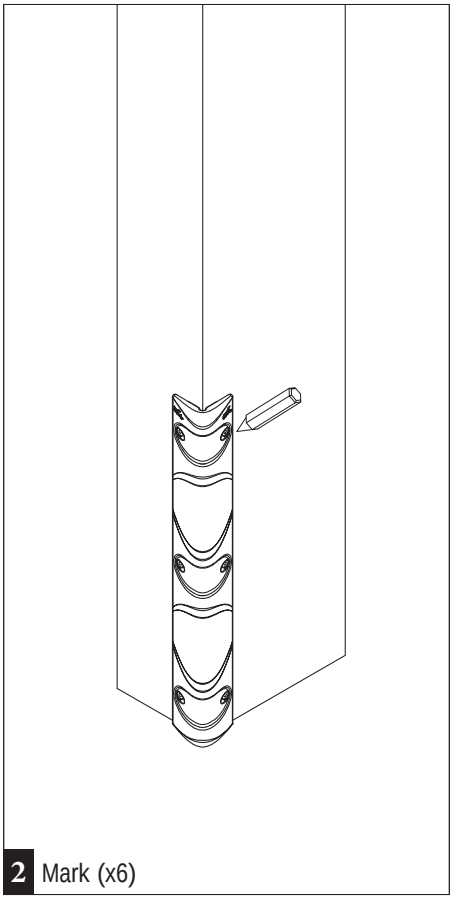

2 Mark (x6)

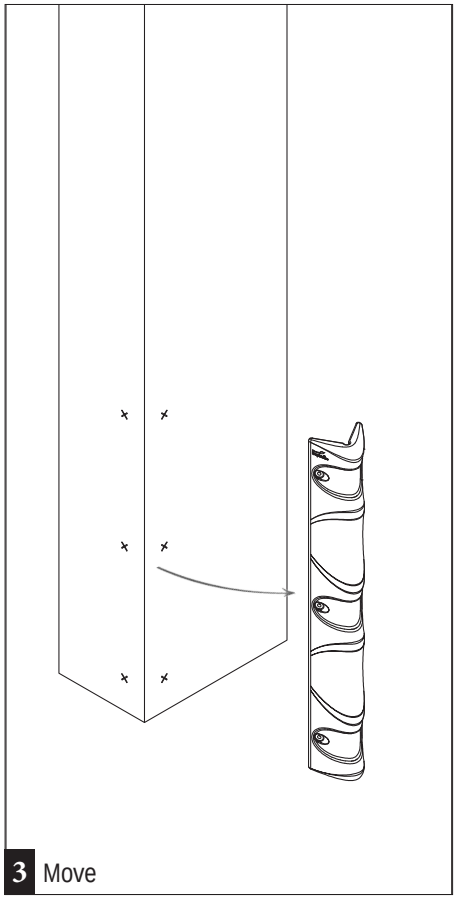

3 Move

boplan

For more information, please visit **www.boplan.com**

Rev: 23 November 2018 2:29 pm

FLEX IMPACT®
BY BOPLAN

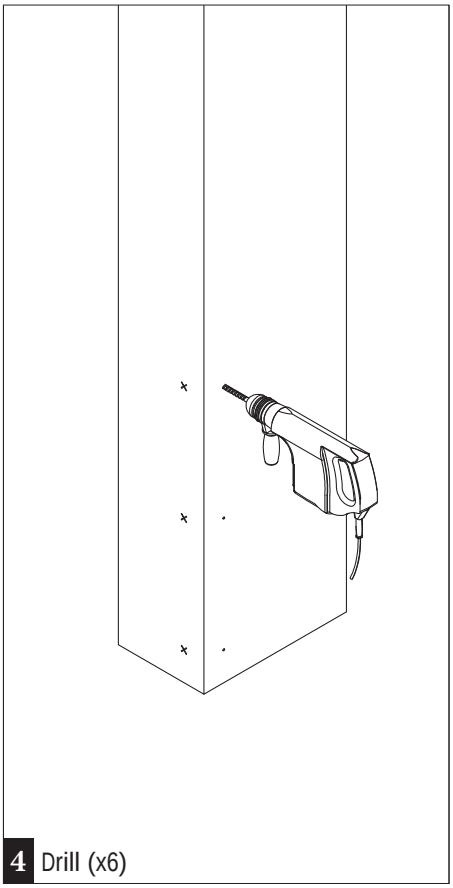

4 Drill (x6)

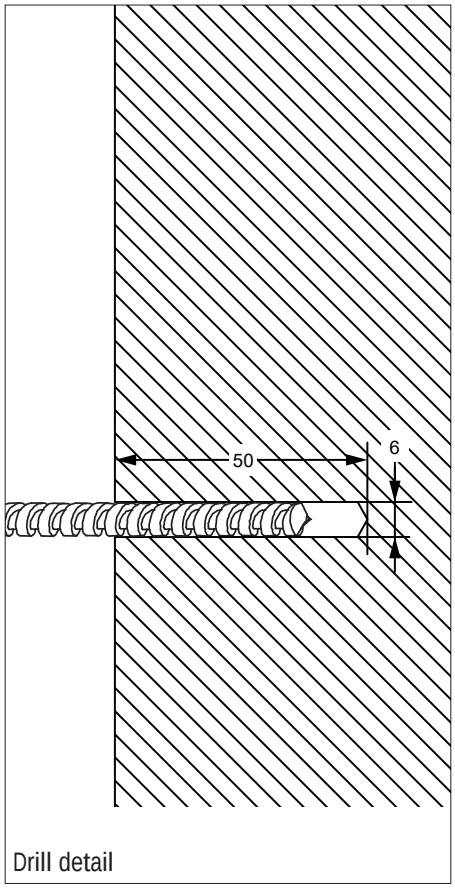

Drill detail

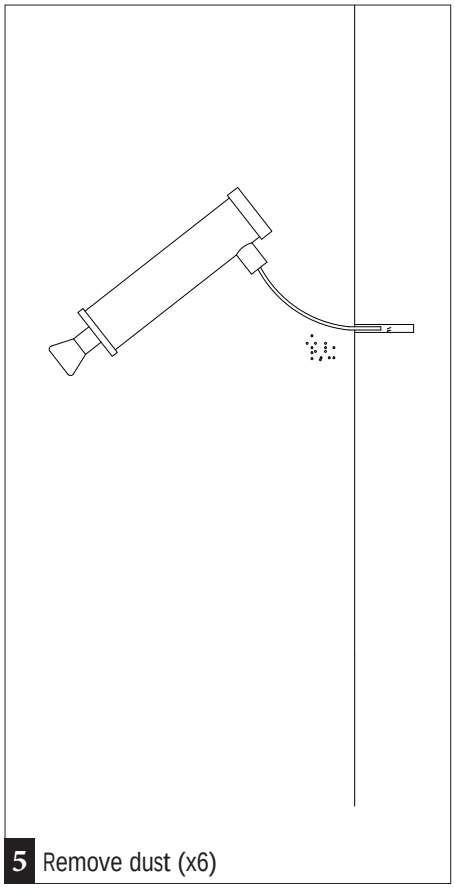

5 Remove dust (x6)

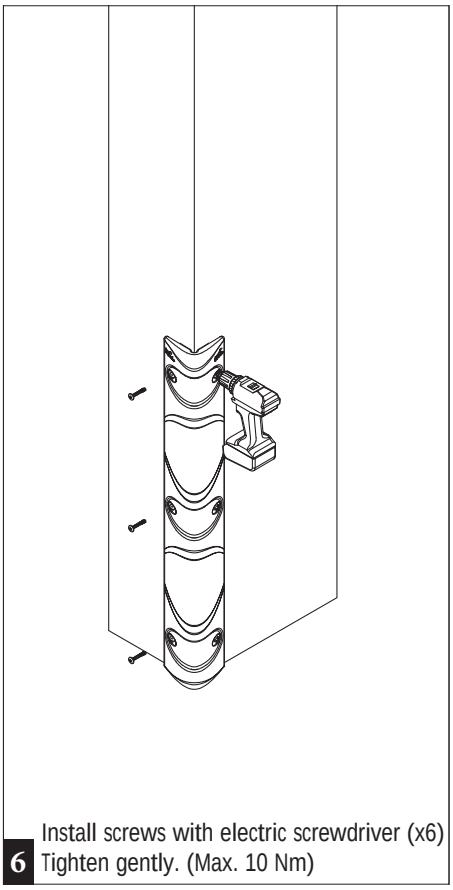

6 Install screws with electric screwdriver (x6)
Tighten gently. (Max. 10 Nm)

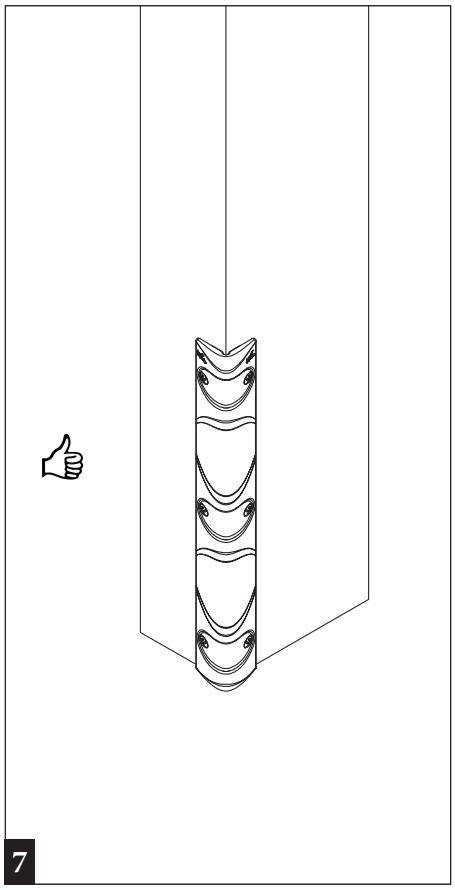

7