FLIP PLUS

INSTALLATION SHEET

Reference: PL2300-...

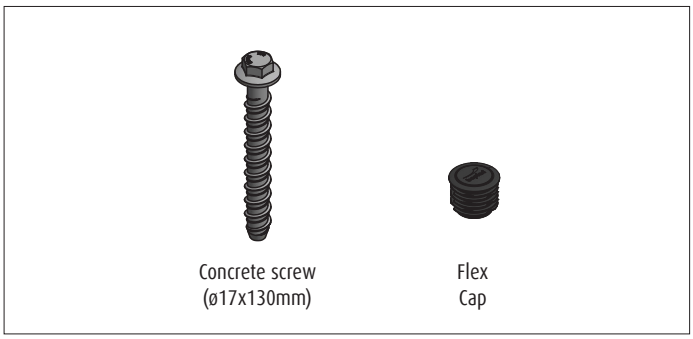

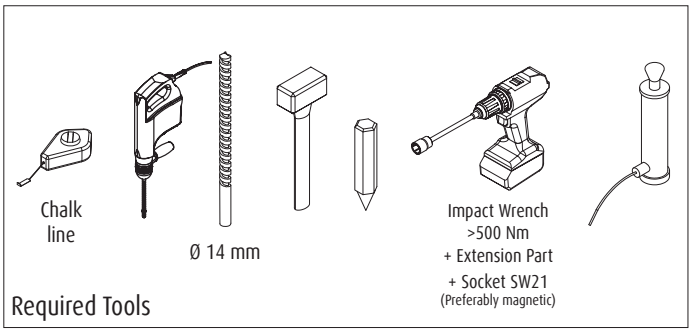

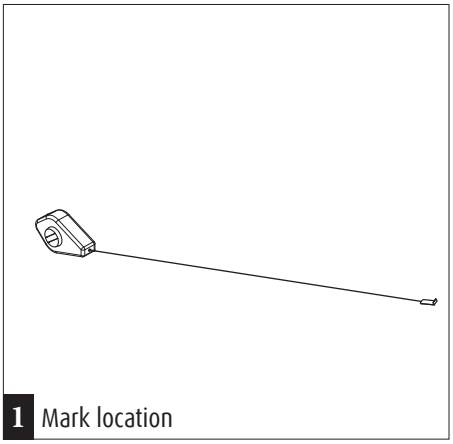

1 Mark location

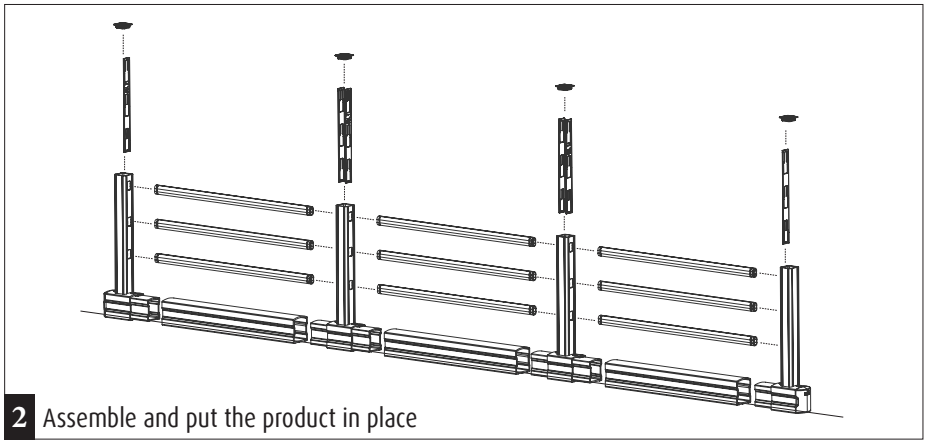

2 Assemble and put the product in place

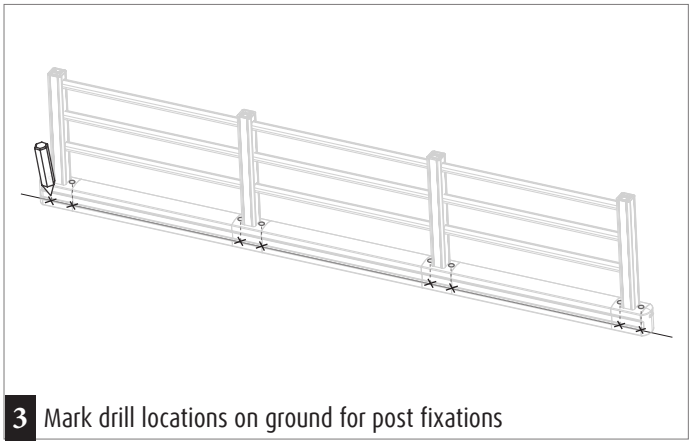

3 Mark drill locations on ground for post fixations

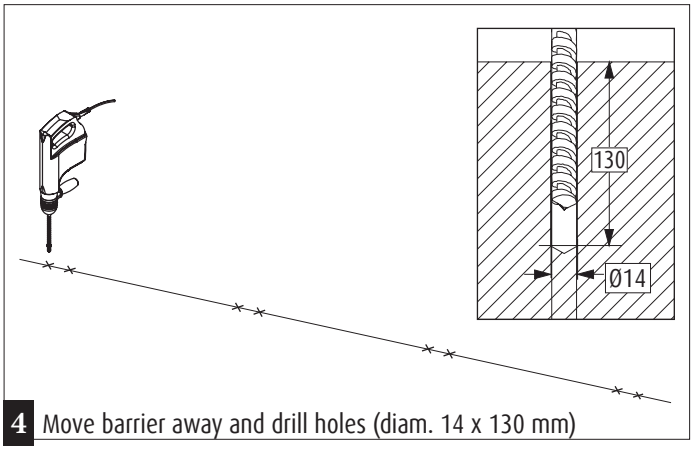

4 Move barrier away and drill holes (diam. 14 x 130 mm)

boplan® READY FOR IMPACT

For more information, please visit **www.boplan.com**

Rev: 2 April 2024 1:34 pm

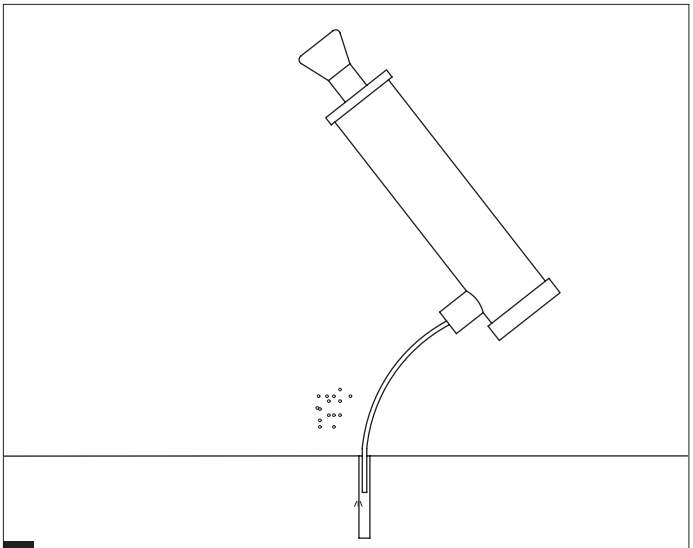

5 Remove dust

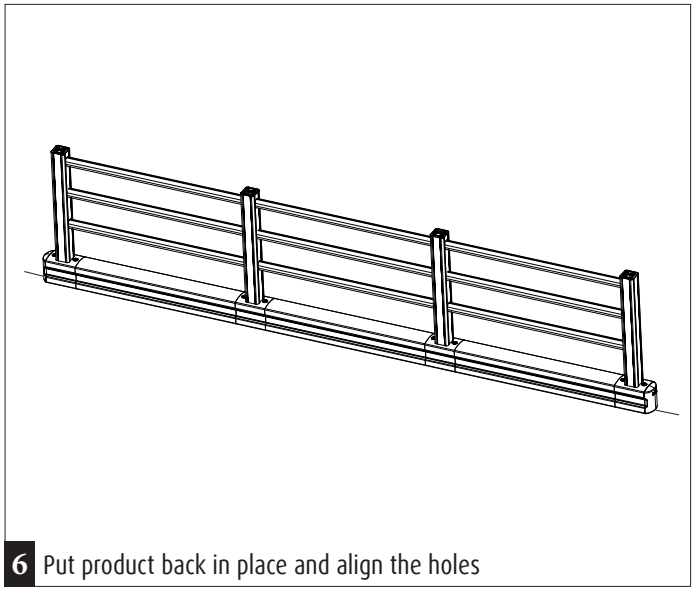

6 Put product back in place and align the holes

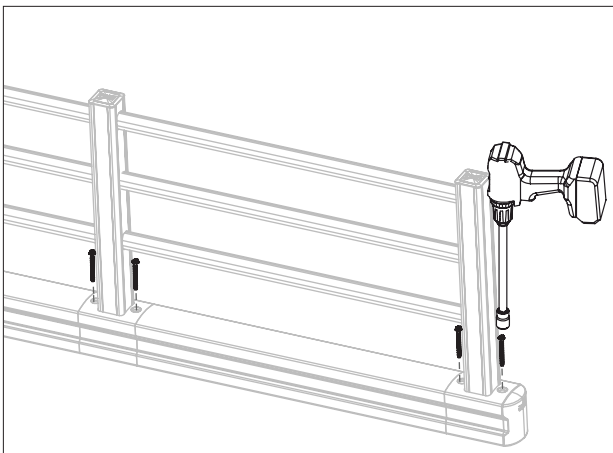

7 Position the screws and tighten with impact wrench.
Torque = 100 Nm

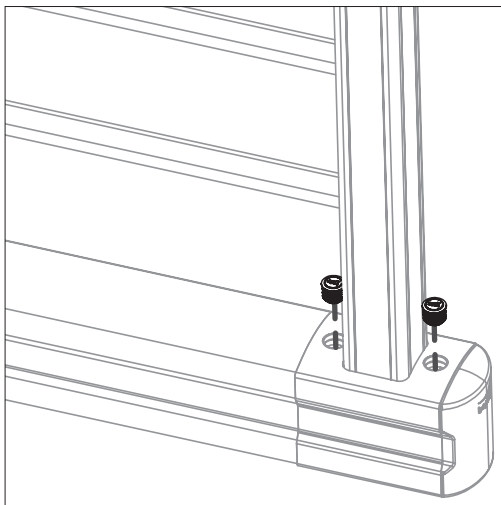

8 Mount flex caps in holes on each post

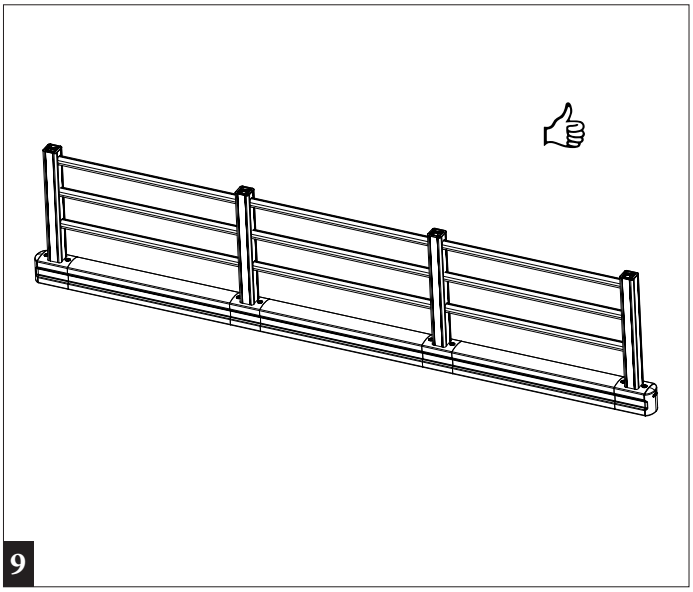

9

boplan® READY FOR IMPACT

For more information, please visit **www.boplan.com**

Rev: 2 April 2024 1:34 pm